 
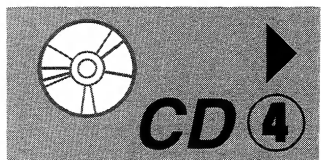 
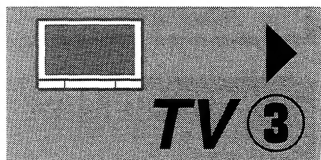 
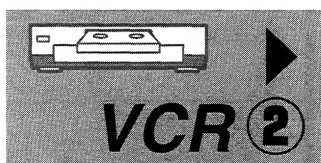 
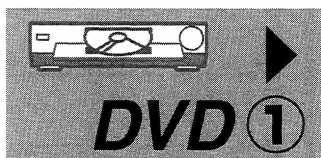 


Panasonic

Remote Control Operation Guide

Model No. **EUR7702KE0**

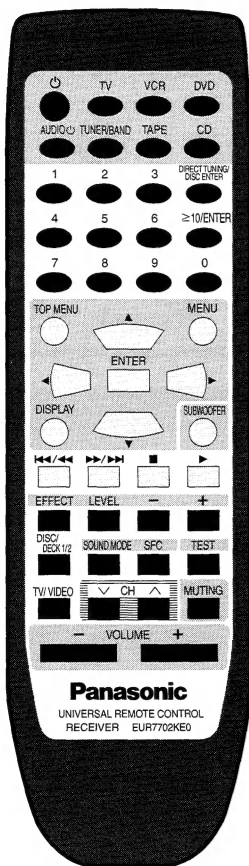

This remote control is the key to your home theater experience.

 
Actual operations depend on your equipment and software.
Be sure to read the instructions for the receiver and your other components.

You may need to enter a code to operate some equipment.
See over for details.

1 DVD

Watching DVDs


Switch on



Switch on the receiver




 Switch on the television and select input



Switch on the player and start play

 Switch off

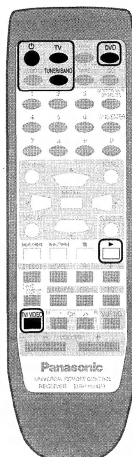

Operating the DVD player

TOP MENU
Show disc menus

MENU
Show disc menus

DISPLAY
Show player menus

ENTER
Select and enter menu items

Specify a disc (5-disc changer)

1 2 3
4 5

Start play from a selected item

1 2 3
4 5 6
7 8 9 0

Select channels

 
1 2 3
4 5 6
7 8 9 0



Skip items during play



Stop play

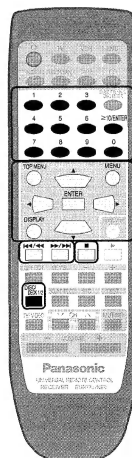

② VCR

Watching videotapes

Switch on



Switch on the receiver



Switch on the television and select input

 


Switch on the player and start play

Switch off





Operating the video deck




Rewind or fast-forward



 
 
Stop play

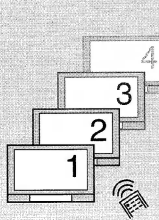

Change channels sequentially

 

Select channels directly

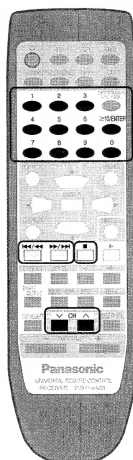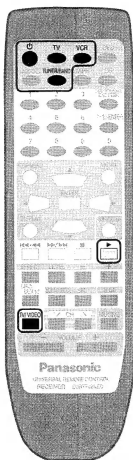  

③ TV

Watching TV

Switch on



Switch on the receiver

 
 


Switch on the television and select input


Switch off



Operating the TV

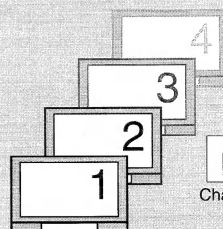

Change channels sequentially

 


Select channels directly


④ CD

Listening to CDs





 
Switch on



Switch off

 


Operating the CD player

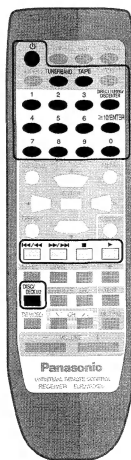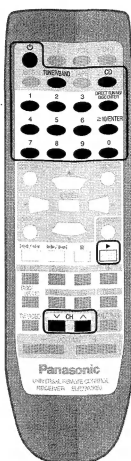     

⑤ RADIO

Listening to the radio



 
Switch on



Switch off



   Operating the radio



⑥ TAPE

Listening to tapes

 
Switch on



Switch off



Operating the tape deck




7 SOUND

STEREO MODE



Select STEREO

 SURROUND MODE

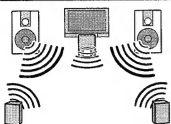

Select SURROUND



Start a test signal



Select the speaker channel and adjust its output level



Stop the test signal

When you select
Dolby Pro Logic II
MUSIC or PANORAMA

SA-HE100 only
When you select
DTS NEO:6 MUSIC



 
Change the sound effect



SFC MODE




Select HALL, CLUB, LIVE,
THEATER, SIM SURR or PARTY

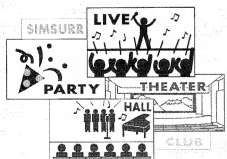

Select the speaker channel and adjust its output level



 Change the delay time

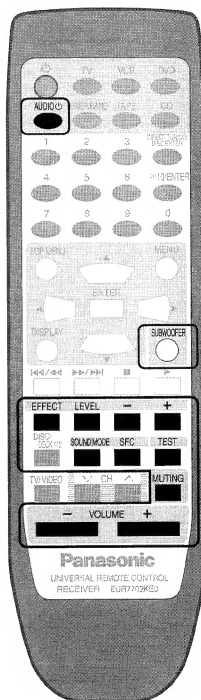

Other functions



 
MUTING

Mute the volume



SUBWOOFER

Adjust subwoofer
output level



Adjust the volume

AUDIO

Switch off the receiver
and other components

8 CODES

 
This remote control can operate Panasonic and Technics audiovisual equipment that have remote control sensors. You may need to change the remote control code.

It can also operate some other brands of televisions, video cassette players, and DVD players. Check the table for the brand and enter the code as follows.


Changing the codes



Press and hold the button corresponding to the equipment

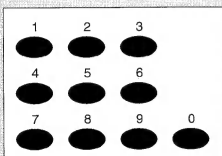


Enter the first digit

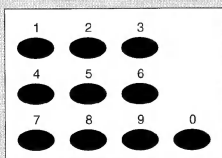 

Enter the second digit

 The remote control outputs the on/off signal. If the code is correct, the equipment turns on or off. If it doesn't, try entering another code.

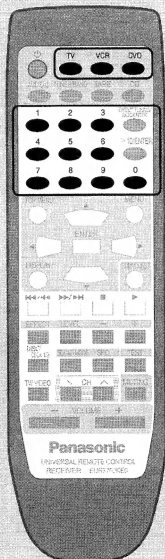


Code table

	TV	VCR	DVD
Panasonic	01,02,26	01,02,09,33	01
Denon	—	—	01,17
Ferguson	—	—	02
Fisher	14	13,14,15 18,34	—
Funai	—	08,30	—
G.E	02,03,07,09	02,03,11	—
GoldStar	07,15	27	—
Hitachi	05,07	09,10,11	11
JVC	12	19,25,31 38,39,40	09
Kenwood	—	—	15
LXI	03,06,07 10,14,15	10,13,14 15,18,27,30	—
Magnavox	06,07,11 15,22	02,09,12	—
Mitsubishi	07,15,16,21	21,22,28,29	06
NEC	07,15	19,25,31,38	—
Nordmende	—	—	02
Philco	06,07	02,09,12,30	—
Philips	06	02,09,12	04,16
Pioneer	02,10,19	09	03
Quasar	02	01,02,09,33	—
Raite	—	—	13
RCA	03,07,09 13,23,24,25	02,03,04 09,10,11 12,23,24,26	02
Saba	—	—	02
Sampo	—	—	14
Samsung	—	—	10
Sanyo	14	14,18,34	—
Sharp	08,21	16,17	08
Shintom	—	32	—
Sony	04	05,06,07 35,36,37	05
Sylvania	06,07,15	02,09,12,30	—
Symphonic	17	30	—
Thomson	—	—	02
Toshiba	10,21	23,24	04
Yamaha	—	—	01
Zenith	18,20	20	07,12

- Note that this remote control cannot operate some equipment and that it may not be able to perform some operations.
- Reenter the codes after you change the batteries.

 Remote Control Operation Guide

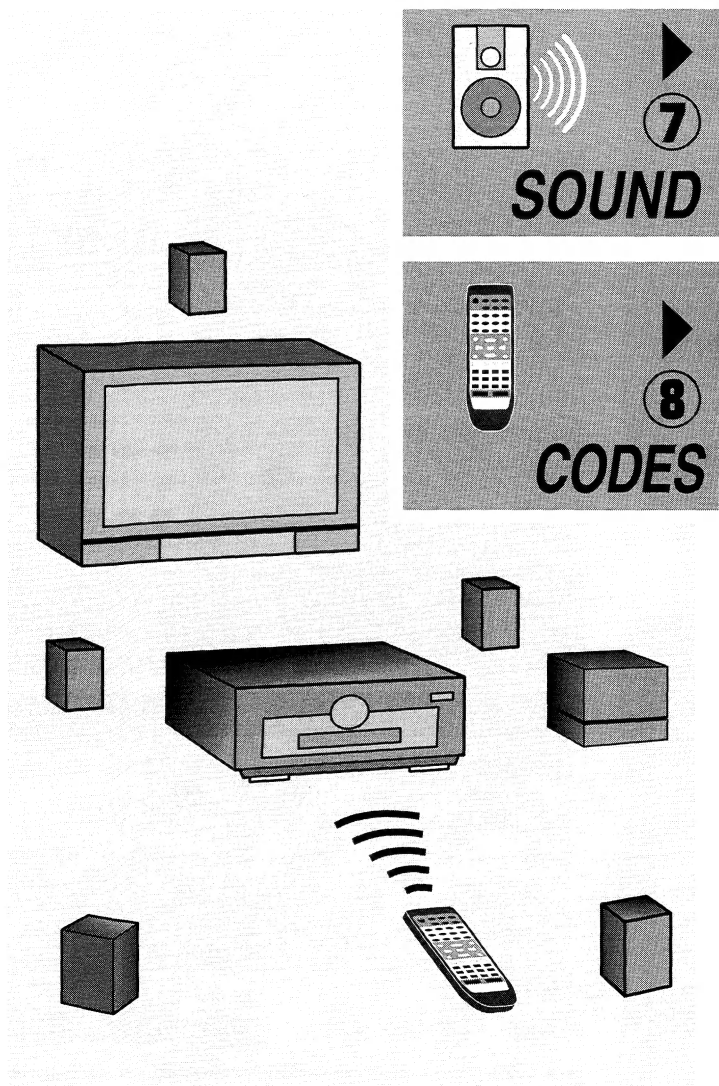

Panasonic[®]
Printed in USA